WALRAVEN



VariClo'



- individually and easily adjustable height to reach the water closet and height of the seat
- at the same time it helps when sitting down and standing up in the toilet
- higher comfort and independency when using the sanitary equipment
- different facilities, for example extensions to raise the height of the water closet, which are unsafe or not hygienic, are things of the past
- suitable for almost every standard model of wall hung pan
- if necessary it is possible to install hand rests on the frame
- height difference between the wall hung pan and hand rest is always equal
- the physical workload of nursing staff is reduced









MORE INDEPENDENT AND BETTER LIFE WITH VARICLO



TECHNICAL DATA:

Pre wall frame:

Material: steel, epoxy coated
Floor support: adjustable height: 90 mm

Wall support: adjustable depth: 70 mm (von 230 – 300 mm)

Loading capacity: 400 kg (tested in accordance with NF X41002, XPD12-208)

Including: vertical or horizontal drainage system

flexible, lockable inflow hose 1/2"

tubular box spanner (for mechanical height adjustment)

fixing material

drilling template

assembly instructions, service instructions


Flush cistern:

Type: Flush volume: Geberit
3 and 6 litre,

adjustable to 4 and 7,5 litre

Including: Control panel (white)

■ 10-year guarantee, 5 years on sealing

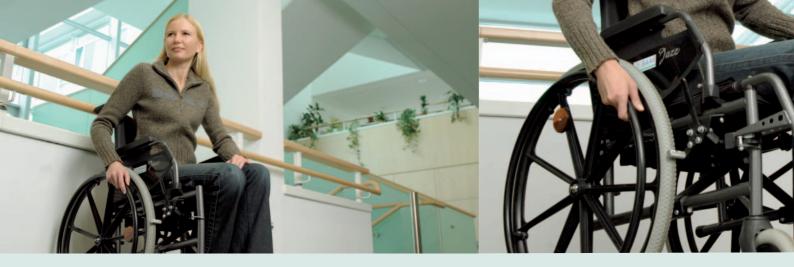

VariClo® means comfort in any age

Water closets are usually assembled with a preset seat height. This could cause a problem for senior citizens, the disabled or wheel chair users when using a water closet. To solve this situation there are often different extensions used which are not hygienic or safe.

VariClo® is a hygienic built-in component, which makes it possible to adjust the height of the water closet seat to the individual requirements of its user at any time.

There are three designs available:

VariClo® with the possibility to mechanically adjust the water closet height by 10 or 30 cm will usually satisfy your requirements in your own home. If there are more users or a requirement for assistance when sitting down and standing up, it would be better to choose a VariClo® ComfortDeLuxe which has an electrically supplied height adjustment of 30 cm.

VariClo® Comfort

Seat height can be easily **mechanically adjusted by 10 cm** at any time, including basic frame with flush cistern, control panel (white), protective cover (white) and drainage system.


| VariClo® Comfort | 90 mm | 110 mm | |
|--|-----------|-----------|--|
| Vertical drainage | - | 035 3 100 | |
| Right horizontal drainage | 035 3 101 | 035 3 103 | |
| Left horizontal drainage | 035 3 102 | 035 3 104 | |
| Extension possibilities: | | | |
| Suspension frame with white protective cover | | 035 3 030 | |
| for mechanical height adjustment up to 30 cm | | | |
| Elec. motor for electrical height adjustment | | 035 3 080 | |
| up to 30 cm* | | | |
| Foldable hand rests (stainless steel)*: | | | |
| - standard | | 035 3 060 | |
| - with electrical height adjust | ment | 035 3 065 | |
| | | | |

^{*}only in combination with the suspension frame (035 3 030)





DIMENSIONS in mm:

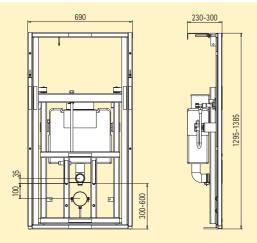

Pre wall frame with pre-assembled flush cistern, suitable for integration into normal pre wall installations.



TECHNICAL DATA:

Pre wall frame:

Material: steel, epoxy coated

Floor support: adjustable height: 90 mm

Wall support: adjustable depth: 70 mm (von 230 – 300 mm)

Loading capacity: 400 kg (tested in accordance with NF X41002, XPD12-208)

Including: vertical or horizontal drainage system

flexible, lockable inflow hose 1/2"

tubular box spanner (for mechanical height adjustment)

fixing material

drilling template

assembly instructions, service instructions

Flush cistern: Type:

Flush volume:

Including:

3 and 6 litre,

Geberit

adjustable to 4 and 7,5 litre

Control panel (white)

■ 10-year guarantee, 5 years on sealing



VariClo® ComfortExtra

Seat height can be easily mechanically adjusted up to 30 cm, including basic frame with flush cistern, control panel (white), suspension frame with protective cover (white) and drainage system.

| VariClo® ComfortExtra | 90 mm | 110 mm | | |
|--|-----------|-----------|--|--|
| Vertical drainage | - | 035 3 110 | | |
| Right horizontal drainage | 035 3 111 | 035 3 113 | | |
| Left horizontal drainage | 035 3 112 | 035 3 114 | | |
| Extension possibilities: | | | | |
| Elec. motor for electrical height adjustment | | 035 3 080 | | |
| up to 30 cm | | | | |
| Foldable hand rests (stainless steel): | | | | |
| - standard | | 035 3 060 | | |
| - with electrical height adjustme | nt | 035 3 065 | | |

More safety and independence

VariClo® offers to habitants in the Resendential Homes more independence and less dependency on the nursing staff. Therefore, there is no need to use unstable and non-hygienic extensions for the water closet.

If necessary, it is possible to mount hand rests on the VariClo® base. They are ergonomically styled so that the difference between the water closet and hand rests is always equal. It enables you to sit down and stand up more safely than alternative facilities offer you.


3 VariClo® ComfortDeLuxe


Seat height can be easily electrically adjusted up to 30 cm, including basic frame with flush cistern, control panel (white), suspension frame with protective cover (white), electrical motor with tumbler switch and drainage system.

| VariClo® ComfortDeLuxe | 90 mm | 110 mm |
|--|-----------|-----------|
| Vertical drainage | - | 035 3 120 |
| Right horizontal drainage | 035 3 121 | 035 3 123 |
| Left horizontal drainage | 035 3 122 | 035 3 124 |
| Extension possibilities: | | |
| Foldable hand rests (stainless steel): | | |
| - standard | | 035 3 060 |
| - with electrical height adjustment | | 035 3 065 |



DIMENSIONS in mm:

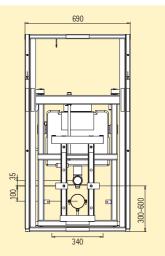



Pre wall frame with pre-assembled flush cistern, suitable for integration into normal pre wall installations.

Suspension frame:

Material: steel, epoxy coated



Nederland:

Walraven B.V.

Postbus 15 NL-3640 AA Mijdrecht Tel.: +31 (0)297 23 30 00 Fax: +31 (0)297 23 30 33 info@walraven.com

France:

Walraven SARL

2, Allée du Moulin Berger F-69130 Ecully Tél.: +33 (0)4 78 66 15 10 Fax: +33 (0)4 78 64 55 89 info@walraven.fr

Polska:

Walraven Sp. z.o.o.

ul. Zakopiańska 85 PL-30 418 Krakòw Tel.: +48 (0)12 268 42 61 Fax: +48 (0)12 268 42 60 info@walraven.pl

België/Belgique:

Walraven BVBA

Ambachtenlaan 30 B-3300 Tienen Tel.: +32 (0)16 82 20 40 Fax: +32 (0)16 82 01 86 info@walraven.be

United Kingdom:

IHL Walraven Ltd.

Thorpe Close, Banbury Oxon, UK-OX16 4UU Tel.: +44 (0)1295 75 34 00 Fax: +44 (0)1295 75 34 28 sales@walraven.co.uk

Slovakia:

Walraven Slovakia s.r.o.

Elektrarenska 1 SK-813 03 Bratislava Tel.: +421 (0)2 44 63 03 75 Fax: +421 (0)2 44 63 03 76 info@walraven.sk

Deutschland:

BIS Walraven GmbH

Postfach 125128 D-95425 Bayreuth Tel.: +49 (0)921 7560 0 Fax: +49 (0)921 7560 222 info@bis-walraven.de

Česká Republika:

Walraven IS s.r.o.

Bezděčín 88 CZ-29301 Mladá Boleslav Tel.: +420 326 72 40 09 Fax: +420 326 73 73 91 info@walraven-is.cz

Other countries:

Walraven International B.V.

PO Box 15 NL-3640 AA Mijdrecht Tel.: +31 (0)297 23 30 00

Fax: +31 (0)297 28 64 09 export@walraven.com

Visit our website: www.variclo.com